


Because of Variations in printers it is always advisable to drill the mounting holes with the unit as a template.
 P.S. Use a ruler to verify 5" & 6" lengths above to insure accuracy.

5/16 DRILL BIT!

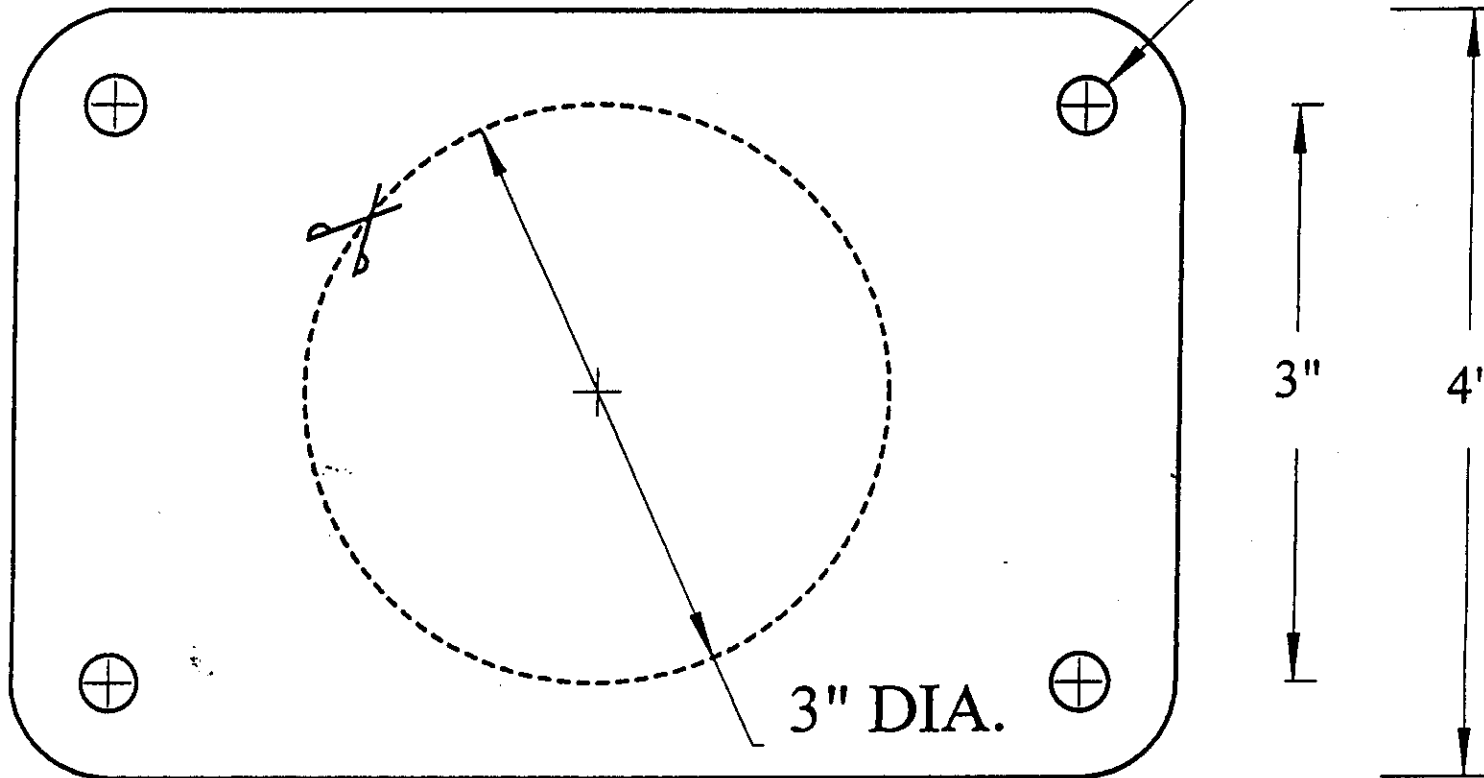

**PILOT HOLE FOR PASS THROUGH! (MINIMUM REQ)
 (LOWER ROTATING SEAL MUST-NOT TOUCH ANYWHERE!)**

ACTUAL SIZE.

TEMPLATE

NOTE: ALL DIMENSIONS IN INCHES.