


**WARNING! Do not drill for bolts until the lower base is flush to deck surface**

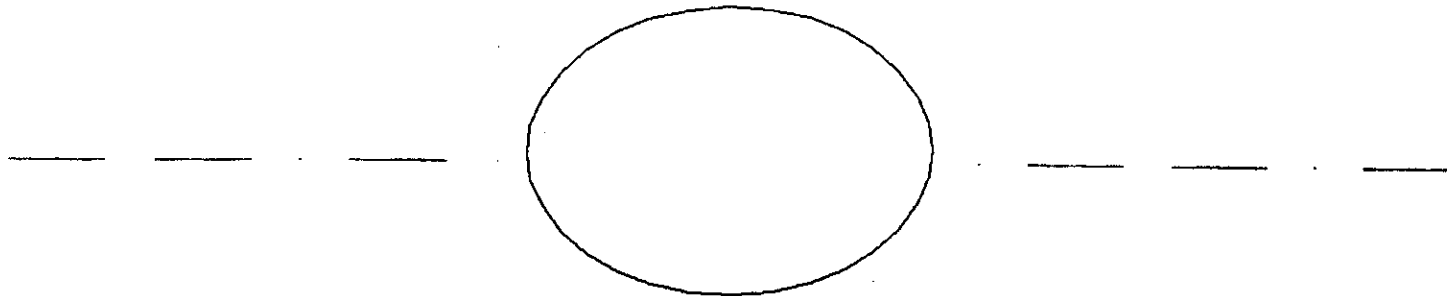

**CHAMFER ELLIPSE AS NECESSARY FOR WELD FILLET.**