


**WARNING!** Do not drill for bolts until the lower base is flush to deck surface

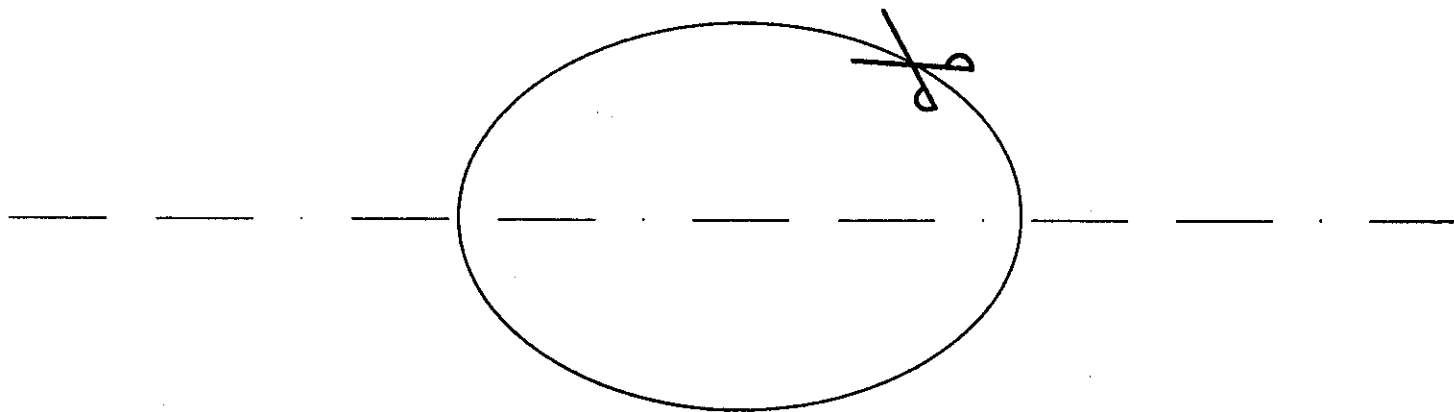

**CHAMFER ELLIPSE AS NECESSARY FOR WELD FILLET.**