CONVERSION KIT INSTALLATION

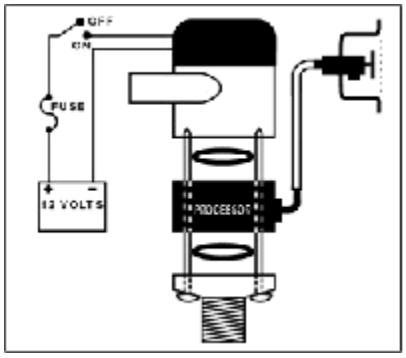

Figure 2

1. Remove livewell pump.
2. Remove 4 screws and separate pump from base.
3. Discard the 4 original screws and original O ring.
4. (A) Very carefully place pump upside sown, lay the first new O ring in place on pump bottom.
(B) Next place processor in place while aligning the 4 screw holes. The Optional No-Lok should always face the same way as the pump output nozzle (See Figure 1 and instructions for the No-Lok).
(C) Lay the second O ring in place on the processor.
(D) Next, place pump base on top, and align the 4 screw holes.
(E) Insert the 4 new 1 ¾" screws and tighten evenly.
5. Check for leaks. A simple test is to block all openings except one, place to lips, and suck in. If suction does not hold, there is a leak.
6. Reinstall your transformed oxygen infusor.
7. Cut a 2" hole above the waterline o livewell, and install Air Control.
8. When in doubt, check with your dealer of a professional.!